



Sprout Accessories Pty Ltd

W: Sproutinc.com.au

E: sproutenquiries@sproutinc.com.au

sprout.

INSTRUCTION MANUAL

Nomad 3+ Bluetooth Speaker





Sprout is an Australian brand that develops technology accessories to enhance your world, now and into the future. From maximising your productivity at work and while you study to enriching your downtime and recreational activities, we develop accessories that add value to your way of life.



CONTENT

| | |
|---------------------------|----|
| 01. PRODUCT OVERVIEW | 04 |
| 02. WHAT'S IN THE BOX? | 06 |
| 03. QUICK START GUIDE | 07 |
| 04. OPERATING CONTROLS | 11 |
| 05. SPECIFICATIONS | 13 |
| 06. PRODUCT USE AND CARE | 14 |
| 07. IMPORTANT SAFETY INFO | 16 |
| 08. CONSUMER GUARANTEE | 18 |



Scan the QR code
to access an online
version of this manual


01.

Product Overview

1. Protective screw cap
2. Aux in
3. Main power on/off switch
4. USB 2.0 output
5. USB-C input
6. Microphone
7. Power/Bluetooth button (plus play, pause and answer functions)
8. Power/Bluetooth indicator
9. Battery level indicator
10. Volume control (plus skip forward/back function)
11. UNISYNC® button

01.

Product Overview

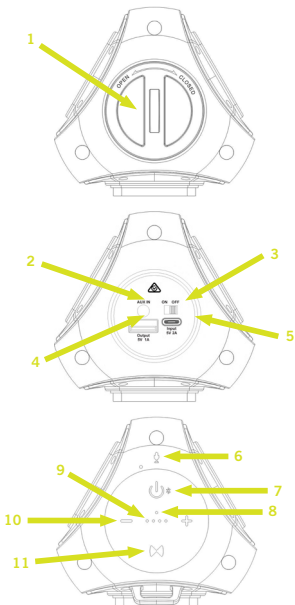

02.

What's in the Box?

Thank you for choosing our Nomad 3+ Bluetooth Speaker.

For optimum performance and safety, please read instructions carefully before usage.

Please keep this manual for future reference.

1x Nomad 3+ Bluetooth Speaker

1x USB Type-A to USB Type-C charging cable

1x Aux cable

1x Product manual

1x User manual



03.


Quick Start Guide

Charging Your Nomad 3+:

! Important note: Charging the Nomad 3+ requires the use of a power source*. The speaker is supplied with a USB-A to USB-C charging cable, but does not include a power source.

1. Connect the USB Type-C cable into the 'USB-C input' and connect the USB-A end of cable into a power source*.
2. The battery LED indicator will flash from one to four LEDs to indicate Nomad 3+ is charging. The lights will stop flashing once Nomad 3+ is fully charged**.

4 white lights on: Battery 100% 

3 white lights on: Battery 75% 

2 white lights on: Battery 50% 

1 white light on: Battery requires recharge 

The speaker will announce "Low Battery" when the battery level reaches 10%.

*Power source options include USB connection to an AC power adapter, a car charger or computer/notebook USB connection.

**Full charge will take approximately 4 hours.

Turning Nomad 3+ on/off:

- Unscrew the protective screw cap anticlockwise and change the main power on/off switch to the 'on' position. The Nomad 3+ is now on standby.
- To power on, press the Power/Bluetooth button. A blue LED light on the Power/Bluetooth indicator will show when the Nomad 3+ is on.
- To turn off, switch the main power on/off switch to the 'off' position.
- Always ensure that the protective screw cap is replaced and screwed clockwise until tightly sealed. **The Nomad 3+ is only waterproof when this cap is tightly closed.**

USB charging output:

- Nomad 3+ can recharge a variety of devices using its 5,200mAh internal battery.
- Simply connect your device using a USB Type-A cable into the USB output port.

Connecting to your Nomad 3+ Speaker:

You can play music through your Nomad 3+ Speaker using Bluetooth or an Auxiliary Cable.

Method 1: Connecting via Bluetooth

1. Press the power button for approximately three seconds. The power/Bluetooth indicator will flash blue and red to indicate the Nomad 3+ is ready for pairing*.
2. Turn on Bluetooth on your mobile phone/music device**.
3. 'Nomad 3+' will appear on your mobile phone/music device. Select 'Nomad 3+' to pair.
4. Once your mobile phone/music device is connected to the Nomad 3+, you will hear 'Bluetooth connected'***.
5. Enjoy your music

*If the single LED is not flashing red and blue, hold the UNISYNC button for 5 seconds to initiate Bluetooth pairing.

**If you are not familiar with Bluetooth pairing for your mobile phone or music device, refer to the user guide for your mobile phone/music device for instructions to pair a new device using Bluetooth.

***Nomad 3+ will always store the last device paired and if the device is within Bluetooth range, Nomad 3+ will automatically connect to the device.

03.

Quick Start Guide

Method 2: Connecting via Auxiliary Cable

To play music using the auxiliary cable, connect the cable with your device or mobile phone. Nomad 3+ will play the music when you press 'play' on your device.



04.

Operating Controls

The following controls will assist in the operation of the Nomad 3+ Speaker:

Play/Pause/Answer Phone Calls

Once your device is connected to the Nomad 3+, you can press the Power/Bluetooth button once to:

- Pause and play music
- Answer phone calls

Volume Control

Short press the +/- volume control buttons to increase and decrease music and phone call volume.

Skip music tracks

Long press the volume control buttons to skip music tracks:

- Long press '+' button to skip to next song
- Long Press '-' button to skip to previous song

Connecting Multiple Devices via UNISYNC®

Using the UNISYNC® feature you can connect up to 50 UNISYNC®-compatible devices. In this example, your Nomad 3+ is your primary device.

To connect a replica, short press the UNISYNC® button on your primary device once to enter UNISYNC® Mode. Once the primary announces it is in UNISYNC® Mode, repeat on the replica. After the replica announces it is in UNISYNC® Mode, press the UNISYNC® button on the primary device once more – the replica will announce it is using UNISYNC® Audio. The primary speaker will show a solid blue light while replicas will show a flashing red and blue light.

Press UNISYNC® button again to disable UNISYNC®.*

Press and hold the UNISYNC® button for five seconds to reset the UNISYNC® function.**

*If UNISYNC® is disabled, Nomad 3+ will disconnect from but remember the replicas connected to it.

**Resetting UNISYNC® will enable Nomad 3+ to ‘forget’ all replica devices.

05.

Specifications

- Unit Size/Weight: 200 x 96 x 96 mm (L x W x H)
- Output Power: RMS 24W
- S/N Ratio: 85db +/- 3db
- Frequency Range: 90Hz - 20 kHz
- Power Source: 7.4V, 5,200mAh Lithium Battery
- Playtime: 12+ hours from full charge at 75% volume level
- 4 hours charge time (PD 3.0 fast charging)
- Function: Bluetooth/Aux-in/Microphone/Powerbank/UNISYNC®
- Bluetooth: BT 5.1 Version + EDR
- Operating Temperature: 0-40°C
- Dust/Waterproof IP Code: IP67
- Drop-proof to 2m

06.


Product Use and Care

Nomad 3+ Bluetooth speaker is intended to be used both indoors and outdoors. The speaker has been tested to IP67 waterproofing and dustproofing standards. IP67 standard allows Nomad 3+ to be submerged in water up to 1 metre for 30 minutes without any damage. However, Nomad 3+ is not intended for constant underwater use.

Please ensure that the protective screw cap is properly closed before use. The speaker will only meet IP67 ratings if all rubber seals and cap are properly locked and sealed. If Nomad 3+ is placed in water without the protective screw cap securely closed, water may enter Nomad 3+ and void its warranty.

Always make sure the protective screw cap is clean, free of any debris and correctly fitted.

Included cables are **not** waterproof.

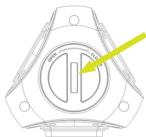

Important: The speaker will only meet IP67 ratings if all rubber seals and cap are properly locked and sealed.

06.

Product Use and Care

If you notice a muffling of audio after submersion, gently shake Nomad 3+ to clear excess water. If your speaker is exposed to salt water clean it thoroughly after use with fresh water. Do not apply excessive force to any surfaces of Nomad 3+ when wet or in a wet environment.

Avoid prolonged exposure to ultraviolet radiation (UV) sunlight or magnetic fields.

Check the rubber seal periodically for premature wear and clean Nomad 3+ with a soft moist cloth and ensure no objects such as dirt, hair or sand are on the rubber seal ring. Do not use any oily solvent or chemicals for cleaning.

07.

Important Safety Info

Do not attempt to charge Nomad 3+ when it is wet or you suspect water has seeped into the device. Thoroughly dry Nomad 3+ and make sure all connections are dry before attempting to open the protective screw cap or connect a USB cable or power source. Failure to do so may result in electrical shock, fire or electrical damage to the Nomad 3+ and may void the warranty.

Do not use the Nomad 3+ when you are charging the battery.

Do not use the Nomad 3+ near an open fire, heat source or excessive heat.

Do not open to modify, repair or remove any original component of Nomad 3+. A qualified technician must carry out repair work. Do not remove the built-in battery or the grill cover. Doing so could cause damage to Nomad 3+ and allow water to enter.

Sound levels should be appropriate to your environment and comply with all local regulations. Ensure that you can hear and are aware of any potential hazards around you when you are enjoying your Nomad 3+.



08.

Consumer Guarantee

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. If you have any questions about your rights in relation to this product, please return it to point of sale or contact us at www.sproutinc.com.au.

Your Nomad 3+ Speaker is warranted to the original owner for 24 months from the date of purchase against defects in material and workmanship under normal use and service. The warranty does not cover misuse of this product and liability will not exceed the purchase price of the product. To obtain warranty service, please contact the Sprout dealer from which you purchased this product or visit sproutinc.com.au for further information about customer support.

08.

Consumer Guarantee

You will need to return this product to the dealer or to Sprout Accessories Pty Ltd in either its original packaging or packaging affording an equal degree of protection. You will bear the cost of shipping the product to a Sprout Accessories Pty Ltd dealer or Sprout Accessories Pty Ltd. This warranty does not affect your legal statutory rights under the Australian Consumer Law. For more information about your rights under Australia Consumer Law go to www.accc.gov.au.

For warranty and technical support please visit sproutinc.com.au or contact us:

77 Hudson Road, Albion, QLD 4010

E sproutenquiries@sproutinc.com.au

Thank you for choosing a Sprout product.

