 




WIRELESS CHARGING 6000mAh POWERBANK

Contents




QUICK START GUIDE

Specifications

Input: DC 5V=2A
USB Output: DC 5V=2.4A+1A
Wireless Output: 5W or 10W
Capacity: 6000mAh
Dimensions: 142.3*75.46*14.36mm
Net Weight: 185g

Components Of Nomad Unit

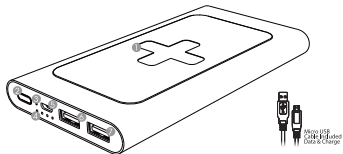

- ① Wireless Output 5W or 10W
- ② OFF/ON
- ③ Wireless Charging Indicator
- ④ Battery Level Indicator
- ⑤ Input 5V/2A
- ⑥ USB Output 5V/1A
- ⑦ USB Output 5V/2.4A

Operations: Display, Buttons & Ports

ON/OFF Switches the power on or off for charging

INPUT/OUTPUT The input interface is micro-USB socket and the output interface is standard USB socket.


Wireless Charging Indicator

*The Red LED and Blue LED will illuminate quickly when the power is on, and it will be Blue and stay Blue when it starts to charge the phone.

*If the Blue LED flashes on and off, it means that the wireless device is not charging properly. Make sure the phone is properly aligned.

Operations: Wireless Charging

Place your phone on the Power Bank and make sure the phone is aligned. Press the power button for 3 seconds to begin charging. The LED will illuminate Blue and stay Blue when it starts to charge the phone.

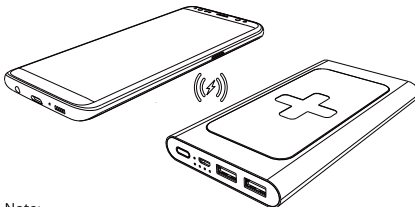

Note:

*For 10W Fast Charge Mode, a Quick Charge adapter must be connected to the power input.

*Fast Charge Mode compatible devices Include: Samsung Galaxy Note 8, S8, S8 Plus, S7, S7 Edge, S6 Edge Plus, Note 5.


*Charging with phone case (especially thicker one) on may influence the charging.

*Case thickness above 5mm or with Metal/Magnet should be taken off.

*The Blue light will flash and stop charging if there is a foreign body, like magnetic pad, metal case or incompatible phone.

Operations: Charging Devices with the USB socket

The powerbank is suitable to charge most devices with DC 5V input. Connect the USB cable provided by your device to the Powerbank and the other end to your device. Press the On/Off button once to commence charging.

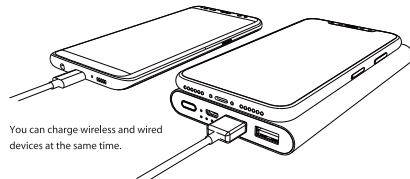

You can charge wireless and wired devices at the same time.

* Due to technical differences with various devices, please refer to your device manufacturer specifications to check for compatibility.

* The USB cable provided may not suit your device and additional cable may be required.

Operations: Charging Alloy Slim Powerbank

Connect the USB cable to the Input port and the other end to either an AC adapter (with USB output) or your computer's USB ports.

⚠ Safety & Warning

Do not use your device when you are charging. Do not use near any open fire, heat source or excessive heat.

Do not open to modify, repair or remove any original component. A qualified technician must carry out repair work. Do not remove the built-in battery.

Consumer Guarantees

Our Goods come with consumer guarantees under Australia Consumer Law. Under this legislation you are entitled to a replacement or refund for a major failure, and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if they are not acceptable quality and the failure is not a major failure. If you have any questions about your rights in relation to this product please return it to point of sale or contact us at enquiries@sproutinc.com.au. For more information about your rights under Australia Consumer Law go to www.accc.gov.au.